

# EASYPAD<sup>®</sup> 730 SATELLITE 3G

ENGLISH

## User Manual



Congratulations for buying EasyPad 730 Satellite 3G!

Thank you very much for your trust and your decision to buy an EASYPIX product!

As we constantly update and improve EasyPad there may be small differences between the printed manual and your EasyPad in some cases. You have the option of downloading the current version of the manual and firmware updates for your EasyPad from our website [www.easypix.eu](http://www.easypix.eu).

**EASYPAD<sup>®</sup>**  
for Android™ 

**easypix<sup>®</sup>**  
Keep it real.

# EASYPAD<sup>®</sup> 730 SATELLITE 3G

ENGLISH

## Table of Contents

Safety instructions	3
Device overview	4
Description of the buttons	5
Language settings	6
Power monitoring	
and charging the batteries	7
Screen lock	7
Connecting with computer	
and data transfer	7
Functions of the buttons on the	
user interface	8
Programme menu	10
System settings	13
1. Wireless & Networks	13
2. Settings for mobile networks	15
3. Bluetooth settings	16
4. Sound settings	17
5. Display settings	17
6. Location & safety	17
7. Application	18
8. Accounts & synchr.	18
9. Data protection	18
10. Memory	18
11. Language & keyboard	18
12. Date & time	19
13. Telephone info	19
Internet	20
Technical Data	22

# EASYPAD<sup>®</sup> 730 SATELLITE 3G

## ENGLISH

This user manual contains important safety instructions and information for proper use of the device. Please follow the instructions in this manual carefully.

**A** Please keep the device away from places with high temperatures, high humidity or dust.

**B** In particular please avoid leaving the device in the car during summer if the doors are closed.

**C** Avoid shocks and do not let the device fall, as otherwise it may cause damage to the device.

**D** The Standby Time of the batteries may vary due to different environmental influences.

**E** We are not responsible for data losses that are caused by damage to the product, repairs or any other reasons.

**F** Do not open the housing of the device. Doing this will void your warranty claims.

**G** Do not use alcohol, thinners or petrol to clean the display  
– use only a dry cloth.

# EASYPAD® 730 SATELLITE 3G

ENGLISH

## Device overview



1. Volume +/- Button

2. Power / Reset Button

3. ESC Button

4. M Button

5. Speaker

6. Microphone

7. MicroSD /TF Card Slot

8. Mini-USB Connector

9. OTG Connector

10. Headphone Jack

11. Home Button

12. Socket for power supply

13. HDMI Jack

14. 3G SIM Card Slot

# EASYPAD<sup>®</sup> 730 SATELLITE 3G

ENGLISH

## **Description of the buttons**

Volume Buttons:

Here you can increase or reduce the volume.

Power Button:

Press the button for two seconds to switch on or switch off the device. Press the button briefly to activate or end the Standby-Mode. Reset: Press the button for seven seconds to restart the device.

ESC Button:

To go back to the previous menu

M Button:

To open the context menu

Home Button:



To go back to the user interface

# EASYPAD<sup>®</sup> 730 SATELLITE 3G

ENGLISH

## Language setting

EasyPad 730 is delivered with English as a default language. To change the language setting, please do the following:

- Press on the programme menu symbol  on the right side of the screen.
- Select 'Settings' .
- Scroll to the end of the list.
- Select 'Language & keyboard'.
- Select 'Select language'.
- Type your preferred language.
- Press the 'Home' button to return to the home screen.

# EASYPAD<sup>®</sup> 730 SATELLITE 3G

ENGLISH

## Power monitoring and charging the batteries

The battery charge symbol  on the status bar indicates the charging status of the batteries.

If the power goes down, the device  shuts itself off automatically.

If less power is shown, use the power adapter

to charge the device. 

The charging time for the battery is approximately four hours. 

## Screen lock


If the device is not used for specified time or the 'Power' button is pressed briefly, the screen is switched off and display lock is activated.

By pressing the 'Power' button briefly the screen will be reactivated.

For locking the screen press the 'Lock' button in the specified direction.

## Connecting to the computer and data transfer

EasyPad is equipped with a High-Speed USB2.0 Interface.

After you connect the device to a computer, it appears in the status display .

Pull the status bar down and press 'USB Connection' to activate the USB Memory. When using the device for data transfer, you cannot access the Micro SD/TF Card from EasyPad!

# EASYPAD<sup>®</sup> 730 SATELLITE 3G

ENGLISH

## Functions of the buttons on the user interface:



Home Button:

To go back to the start screen.



Menu Button:

To open the context menu.



Volume Buttons:

To increase or reduce the volume.



Back Button:

To go back to the previous menu / previous page.



Program Menu Button:

To display the programs and applications.



Change Window Button:

The device has five desktops. You can press this button or push your finger on the touchscreen to the side to navigate between different desktops.



WIFI / WLAN Signal Icon



3G Mobile Network Signal Icon



# EASYPAD<sup>®</sup> 730 SATELLITE 3G

ENGLISH



System instructions:

Pull the status bar down to view messages about new e-mails, MicroSD TF Card Status, downloaded documents, USB Connection Status or other information.



# EASYPAD<sup>®</sup> 730 SATELLITE 3G

ENGLISH

## Program menu



ApkInstaller:

Program for installing and uninstalling Apps that were not downloaded from the Android Market.



Market:

Load Apps (programs) from the Android Market. You can download and install apps, games and other applications. Many are free.



Explorer:

Open the Explorer to access Micro SD TF Cards, USB sticks and other storage media. The Explorer is a practical manager for documents and all types of data.



Internet browser



0.3M camera on the front side,  
2.0M camera on the back side.



E-mail:

Program for retrieving, processing and sending e-mails.



G-mail:

Program for retrieving, processing and sending e-mails through Google account.



Google Talk:

# EASYPAD<sup>®</sup> 730 SATELLITE 3G

## ENGLISH

Program to chat with other Google users.



Google Maps:

Program for the display of maps or satellite images – Route planner.



YouTube:

Program for viewing YouTube videos.



Skype:

Program to chat with other Skype users or to make telephone calls via Internet.



Twitter:

Application for Microblogging – Facilitates the display of public diaries or create a public diary of your own.



Facebook:

Program for using the social network site Facebook.



Calendar:

Managing schedules – can be synchronised automatically with a Google account.



Pocket Calculator



Time:

Time display and setting alarm functions.



Settings:

# EASYPAD<sup>®</sup> 730 SATELLITE 3G

## ENGLISH

Changing the basic settings of EasyPad.



Sound Recorder:

Dictation Device Function.



Video Player:

Display of videos on the screen or output to a TV through HDMI jack.



Audio Player:

Program to play music files and audio books.



Gallery:

Manage and display images and videos – also enables synchronisation with Picasa web albums.



Shelves:

A program for reading and managing e-books.



Raging Thunder: Car racing game

Krazy Kart Racing: Car racing game



Angry Birds Rio: Game of skill



Fruit Ninja: Game of skill

# EASYPAD<sup>®</sup> 730 SATELLITE 3G

 
 
ENGLISH



## System settings

Touch the icon for the settings  to open the system settings menu:

### 1. Wireless & Networks

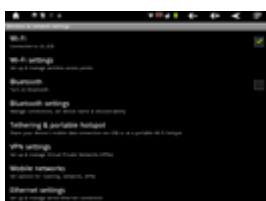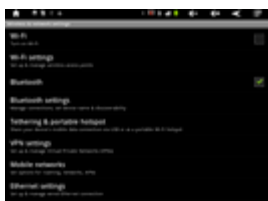Touch 'Wireless & Networks'.



WLAN: Touch  =>  to switch on the WLAN function.  
The device automatically searches for available WLAN networks.

WLAN Settings: Select your network here.


If needed you will be requested to enter your WLAN password:



# EASYPAD<sup>®</sup> 730 SATELLITE 3G

ENGLISH

Advanced WLAN / Wi-Fi settings:

Touch  in the menu for WLAN / Wi-Fi Settings, the menu for advanced settings will open up automatically. In the menu for the advanced settings you can view the current status, the IP address and other device information.

 
# EASYPAD<sup>®</sup> 730 SATELLITE 3G

ENGLISH


## 2. Settings for mobile networks

**Note: Please deactivate the PIN request of your SIM card before inserting it into EasyPad!**

**Please switch off the device before you insert or remove the SIM.**

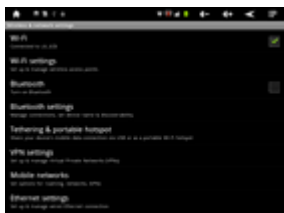



If you want to use a mobile network, you must first – if applicable – terminate the existing connection to a Wi-Fi network as WLAN networks are preferred.

If there is no connection to a mobile network, please pay attention to this icon: 

Touch 'Mobile Networks' to open the menu for the settings. Select 'Data activated'. If you activate 'Data Roaming', you can also use data networks abroad – but it may lead to very high charges!

# EASYPAD<sup>®</sup> 730 SATELLITE 3G

  
ENGLISH

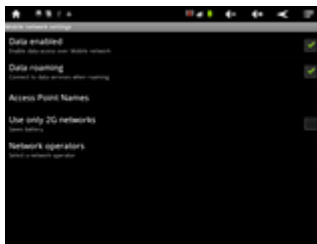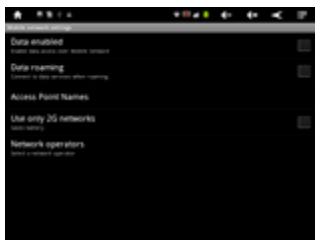

Finally, pay attention to 3G network icon:




If the data connection is not established automatically, please check the APN Settings of your service provider under 'Access Points'.

Through 'Menu' , 'New APN' you can add an access point. Please get the data to be entered there from your network service provider.

### 3. Bluetooth settings

 You can find Bluetooth in the menu for the Wireless and Network settings as shown in the images below:

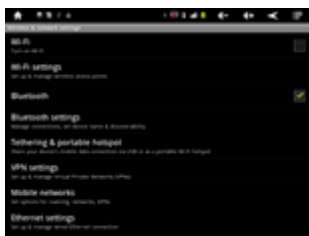



# EASYPAD<sup>®</sup> 730 SATELLITE 3G

## ENGLISH

After the activation of the Bluetooth function, EasyPad automatically searches for available Bluetooth devices. Before you can see these devices, they must be connected with each other (Pairing).

To do this, select the device to be connected and press on both Pairing and Request.

### **4. Sound settings**

The 'Sound' settings contain the volume control, and selection of notification sounds, system sounds, signal tones for Micro SD/TF Cards and USB signal tone.

### **5. Display settings**

Includes brightness, automatic screen rotation (G-sensor), animations and display timeout time, Switch off display after : 15 seconds, 30 seconds, 1 minute, 2 minutes, 10 minutes or 30 minutes are available. For example, if you select 30 seconds, the display will be switched after 30 seconds of inactivity and screen lock is activated. Press the 'Power' button to reactivate the Display. Push the 'Lock' button up to lift the screen lock.

### **6. Location & safety**

Here you can activate the automatic recognition of the location. You can also set security passwords which will prevent unauthorised access to your EasyPad.

### **7. Application**

# EASYPAD<sup>®</sup> 730 SATELLITE 3G

## ENGLISH

Here you can manage your apps and define if apps from sources other than the Android Market are allowed to be installed.

### **8. Accounts & synchr.**

General synchronisation settings:

1. Background data
2. Automatic synchronisation

Account management: Management of user accounts

### **9. Data protection**

Secure my data: Here you can define if different settings should be stored on Google servers.

Touch 'Reset to default' to reset the device to factory settings.  
All settings, self-installed apps and data stored on internal memory can be deleted.

### **10. Memory**

Here the current memory use is displayed.

Touch 'Remove SD Card' to remove the Micro SD/TF Card during use.

### **11. Language and keyboard**

Set the system language and input method.

### **12. Date and time**

# EASYPAD<sup>®</sup> 730 SATELLITE 3G

## ENGLISH

If your network does not support automatic setting of time, you can set the time, time zone and date manually after deactivating automatic settings.

### **13. Telephone info**


Here you can view device internal values such as operating system version, battery status, signal strength of the mobile network etc.

# EASYPAD<sup>®</sup> 730 SATELLITE 3G

ENGLISH

## Main functions

### Internet

Touch  Icon to surf the net.

Google is the default start page.


Touch the input field to display the keyboard:

 


Touch  after entering a website address to open the website.

**Note:** The Android keyboard has few options for settings such as: keyboard language, numbers and icons etc.

The Internet browser can open four websites simultaneously;

Touch  and the menu will be displayed as follows:



# EASYPAD<sup>®</sup> 730 SATELLITE 3G

## ENGLISH



Touch 'New Window' and a new website will be displayed.



'Most visited' and 'History' can be found under 'Bookmarks'.



Click to navigate between two open windows.  
Four different windows are possible simultaneously.



Touch 'Refresh' to refresh the current web page.



A step forward, opposite of Back Icon.



'Add bookmarks', 'Search on the page', 'Select text' 'Page information', 'Page info', 'Forward link' 'Downloads', 'Settings'.

# EASYPAD<sup>®</sup> 730 SATELLITE 3G

ENGLISH

## Technical Data

EasyPad 730 Satellite 3G	7" / 17.8cm Tablet-PC
CPU	Rockchip 2918 1.2 GHz
Operating System	Android 2.3 – Gingerbread
RAM	512MB DDR3
Internal Memory	4GB NAND Flash
Memory Expansion	Micro SD/SDHC up to 32GB
Display	4:3 Capacitive 5-point Multi-Touch-Display
Resolution	800 x 600 Pixel
G-SENSOR	MMA8452Q
Bluetooth	BT 2.1+EDR
Cameras	Front 0,3MP, Back 2.0MP
Battery	4250MAH, 5V, 2A rechargeable Li-ion Battery
MIC	Yes
MP3	Yes
3G-Module	3G integrated (TD, WCDMA, EVDO), Internet & Skype Phone-Function
WIFI	802.11b/g/n (high sensitivity)
I/O ports	1x DC In, 1x headphone, 1x TF Card-Slot, 1x SIM-Card-Slot, 2x USB 2.0, 1 host, 1 OTG, 1x HDMI
Video-Formats	H.264, VP8, RV, WMV, AVS, H.263, MPEG4 etc 1080P, YouTube, 720P, HTML5, Flash 10.1 / 10.2
Music	MP3 / WMA / WAV / AAC, AAC+
Office	Word / Excel / PDF / PPT, Microsoft Wordpad, Microsoft SpreadExcel The software is not on the device and must be downloaded by the user.
Images	JPG, BMP, PNG etc.

# EASYPAD<sup>®</sup> 730 SATELLITE 3G

ENGLISH

**rk29sdk\_gpl\_kernel\_20110702**

**Copyright © Rockchips**

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License, version 2, as published by the Free Software Foundation.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License, version 2, for more details.

You should have received a copy of the GNU General Public License, version 2, along with this program; if not, write to the Free Software Foundation, Inc., 51 Franklin St, Fifth Floor, Boston, MA 02110, USA

You should receive a complete machine-readable copy of the corresponding source code of this program under the following link:

[http://www.easypix.eu/download\\_easypad.html](http://www.easypix.eu/download_easypad.html)

if not, write to Easypix, Corinne Loose, Em Parkveedel 11, D-50733 Cologne, Germany, e-mail: [support@easypix.eu](mailto:support@easypix.eu)